

# TOKEN CONTROL UNIT (KEYPAD) USER MANUAL



S.No	Function	Key name
1.	Next Token Call	NEXT
2.	Token Recall	RECALL
3.	Direct Token	TOKEN NUMBER + NEXT
4.	Reset Token	0 + NEXT
5.	Language Setting	9 + RECALL + 1(Eng) or 2(Hindi) or 3(Tamil) + NEXT
6.	Keypad Type Setting	RECALL + 5 + 0(Manual) or 1(Auto) + NEXT
7.	Secondary Lang Setting	Follow serial step 5 (Language setting)
8.	Ding Dong Bell	9 + RECALL + 7 + NEXT
9.	Voice/Ding Dong Disable	9 + RECALL + 8 + NEXT
10.	Token Sequence Setting	8 + RECALL + 0(Disable) or 1(Enable) + NEXT
11.	Keypad Id Setting	7 + RECALL + 0 + 1 + NEXT

## 1. Language setting

i). Press key 9 + RECALL, then press keys 1-6 to select desired language as given below

Key value	Language
1	English
2	Hindi
3	Tamil
4	Telugu
5	Kannada
6	Malayalam
7	Ding Dong
8	Voice alert mute

## 2. Device ID(counter) setting

1. Press key 7 + Recall, then press enter Keypad ID as two digit E.g 01 then press NEXT